








# NORO®

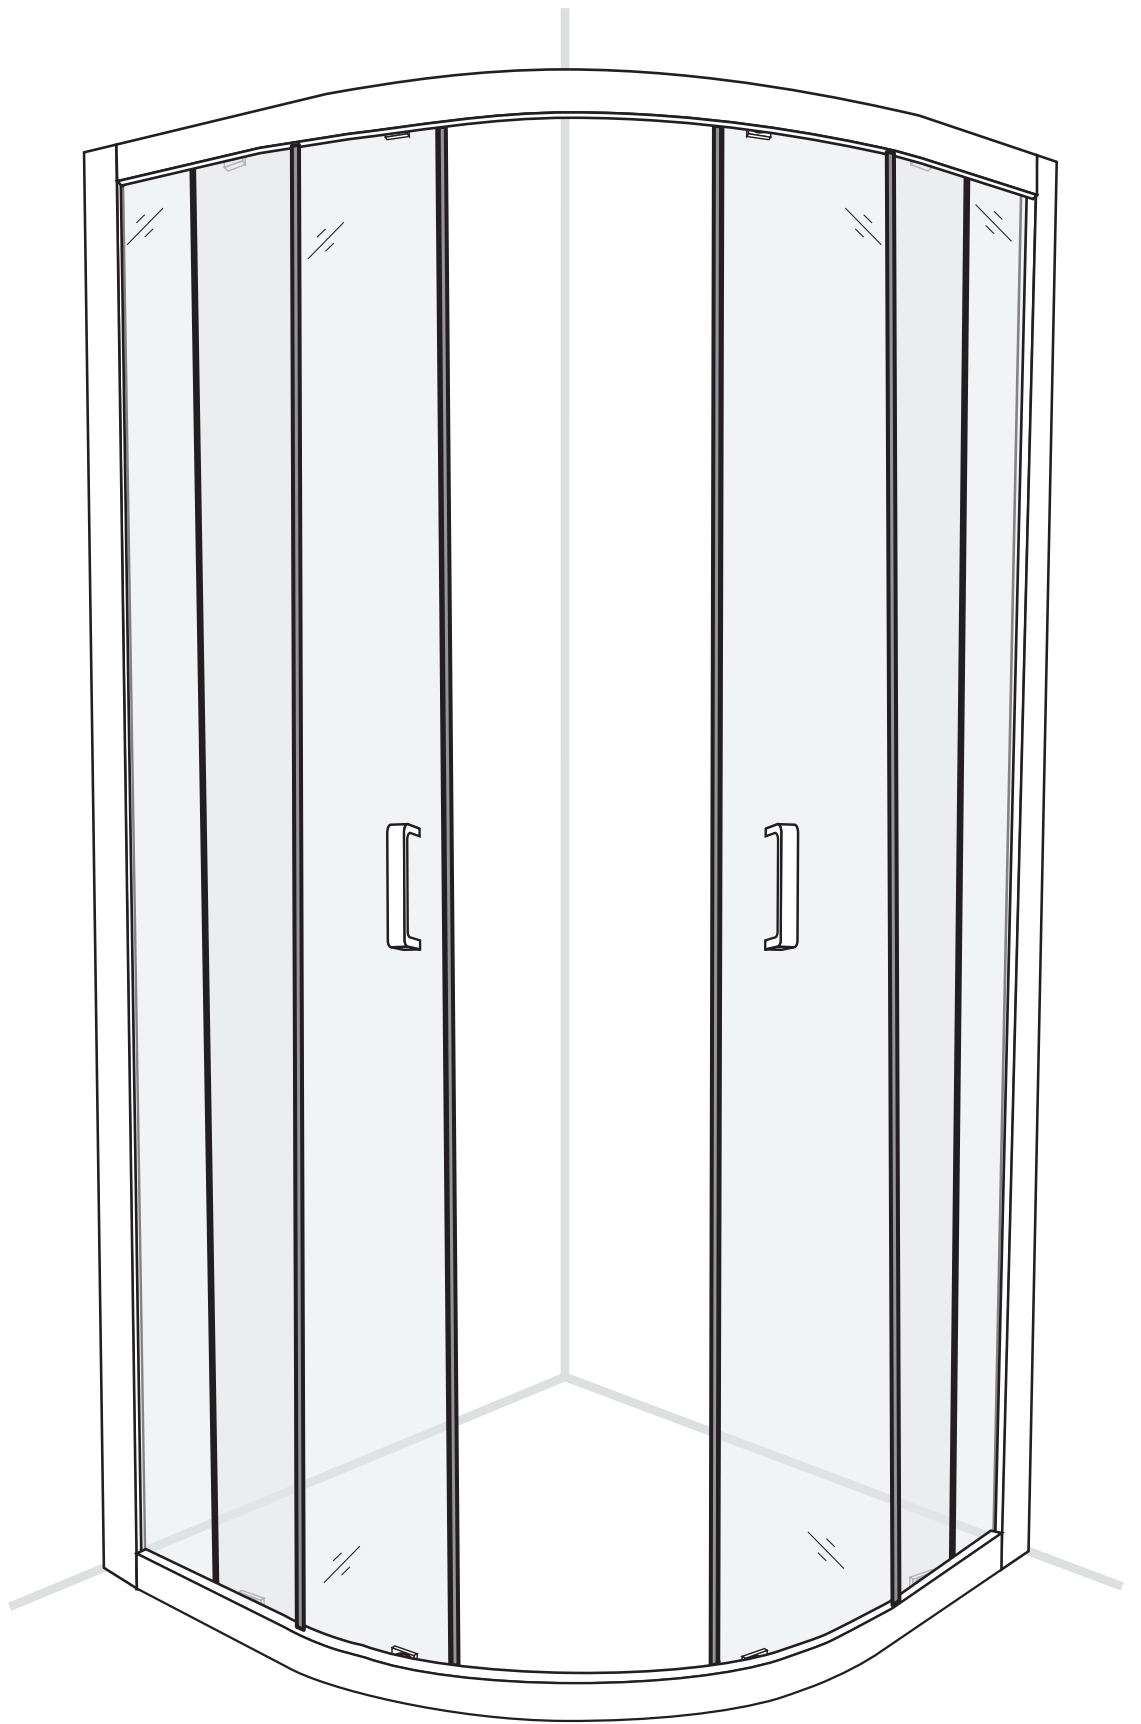


Snow R


## Getting Start:

	<p>This product fulfils the EN14428 standard</p>		<p>Googles are recommended to protect the eyes</p>
	<p>All glass used are tempered security glass</p>		<p>Caution: Always Handle Glass With Care! Always protect the edges and corners of the glass when assembling.</p>
	<p>2 people are recommended to assemble this shower enclosure</p>		<p>Gloves are recommended to prevent slippery on glass</p>


## Tools Needed:

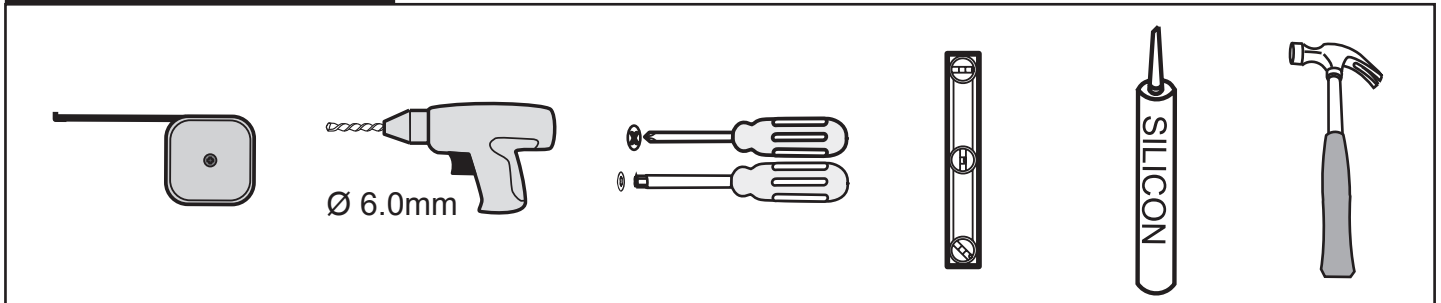

## Accessories Bags:


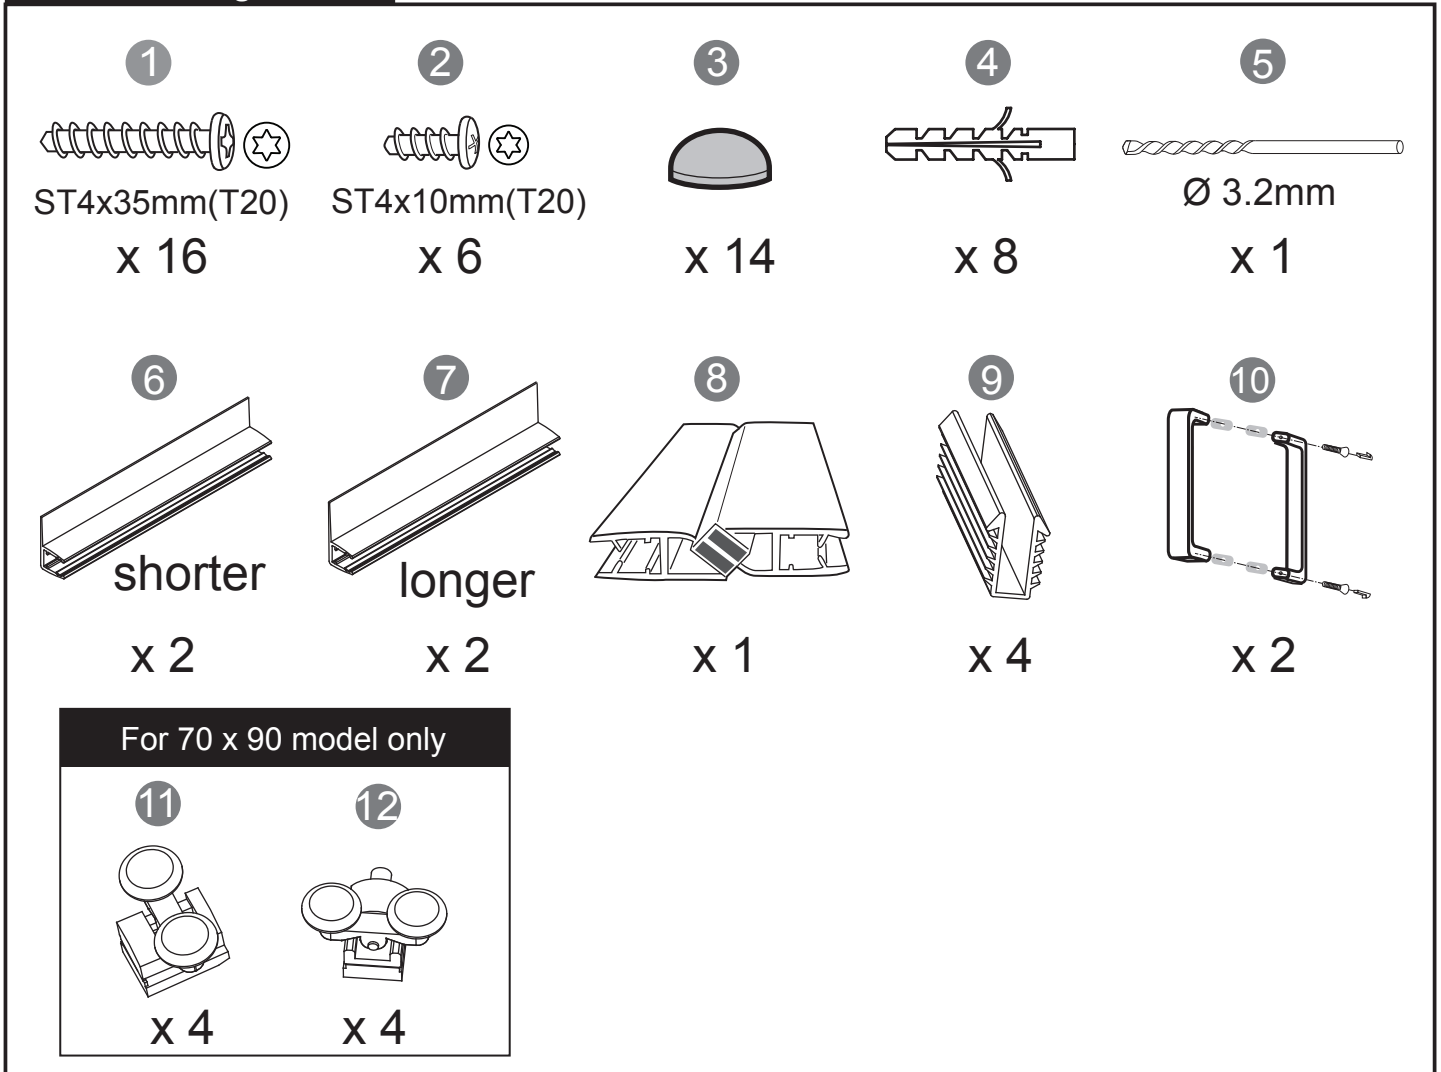


**Measurement:**

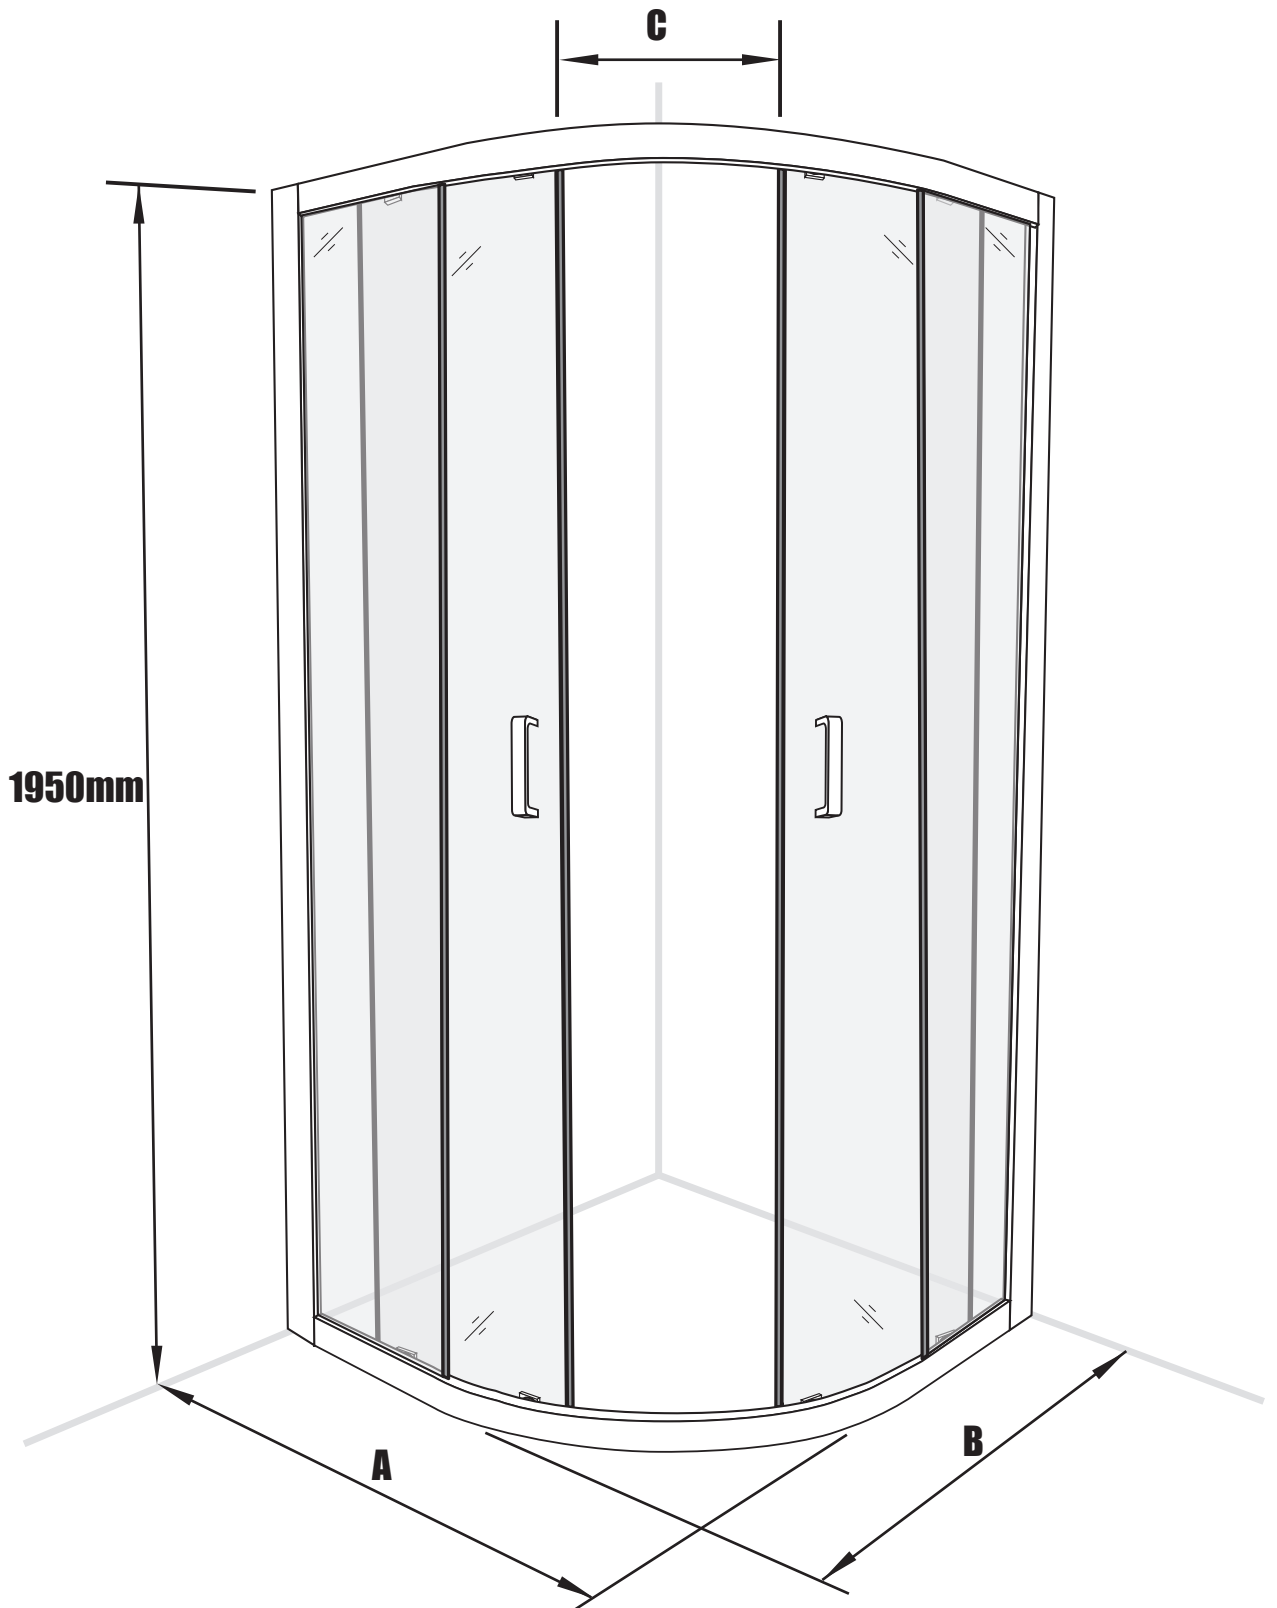













<b>Model</b>	<b>A</b>	<b>B</b>	<b>C</b>
<b>90x90</b>	900mm	900mm	545mm
<b>80x80</b>	800mm	800mm	410mm
<b>70x90 (reversible)</b>	700/900mm	900/700mm	385mm












**Exploded View:**

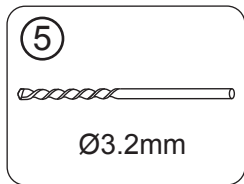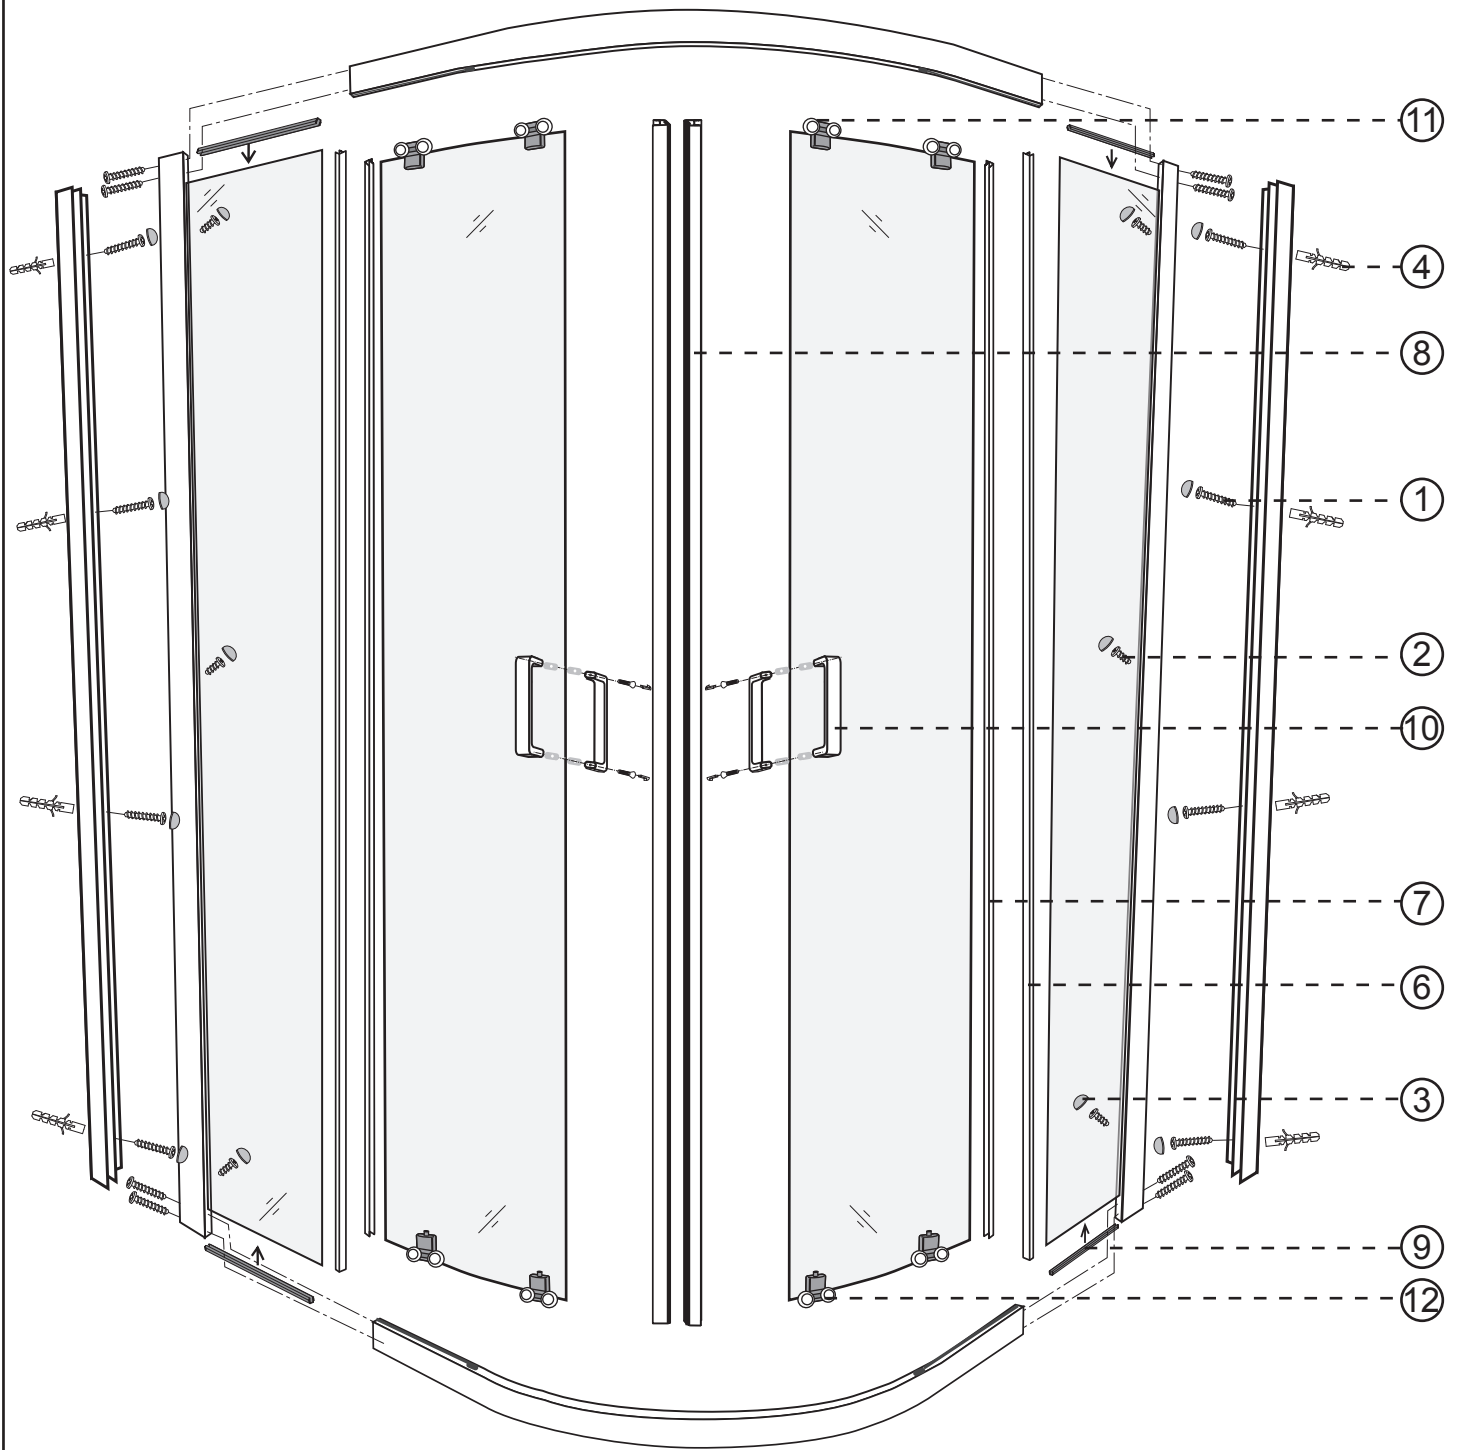

**Exploded View:**

<b>Drawing Nr.</b>	<b>Art Nr.</b>	<b>Description</b>	<b>Unit</b>
1	9150-A	ST4x35mm screw	pc
2		ST4x10mm screw	pc
3		Screw cover	pc
4		Plastic plugs	pc
5		3.2 drill bit	pc
6	9150-B	Gasket on side panel	pc
7		Gasket on door	pc
8		Magnetic gasket	set
9	9150-C	Gasket between side panel and profile	pc
10	9140-E	Handle set ( 145mm cc )	set
11	9150-D	Spring wheels (Up)	pc
12		Spring wheels (Bottom)	pc

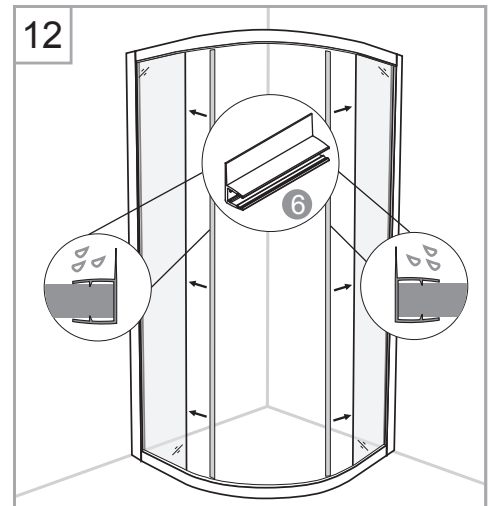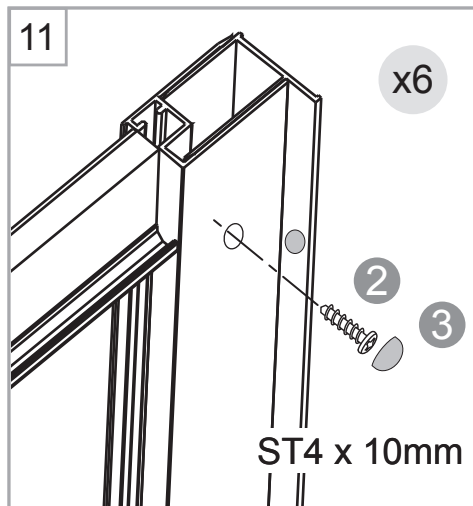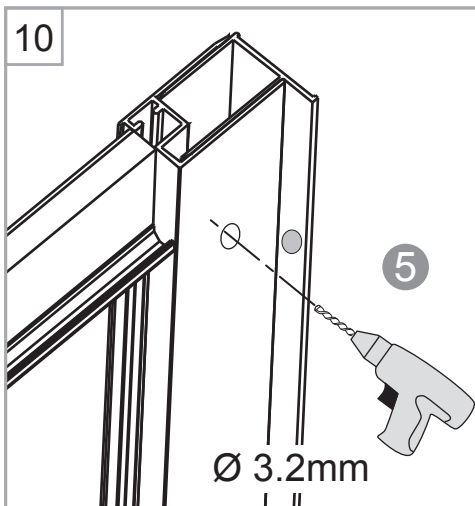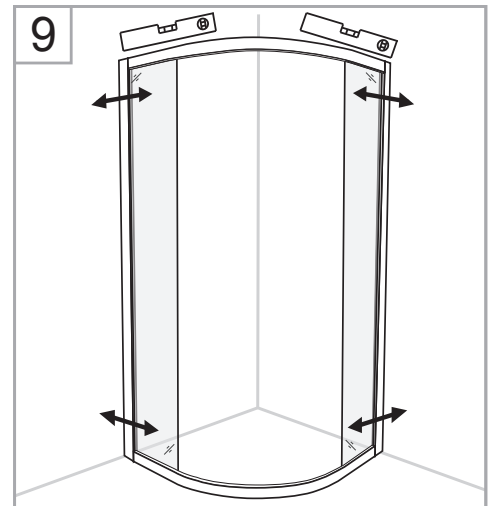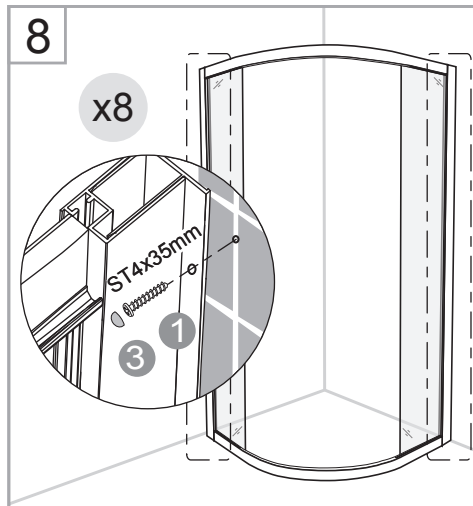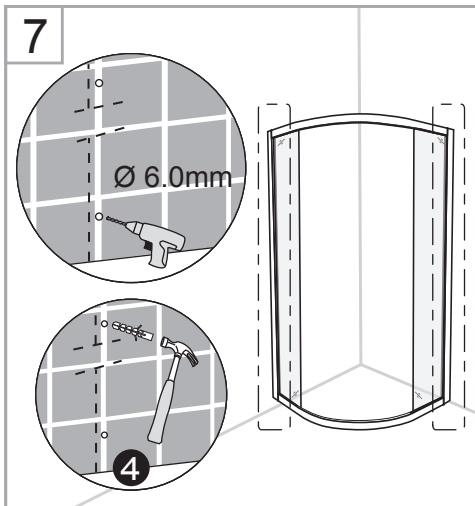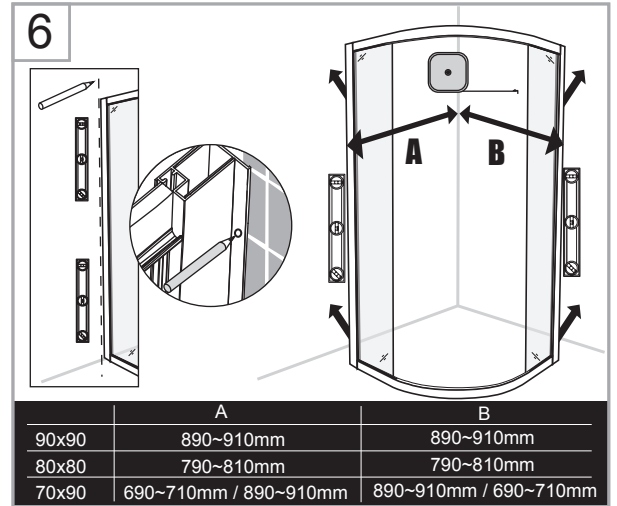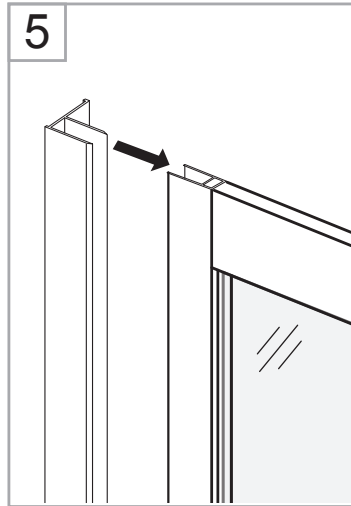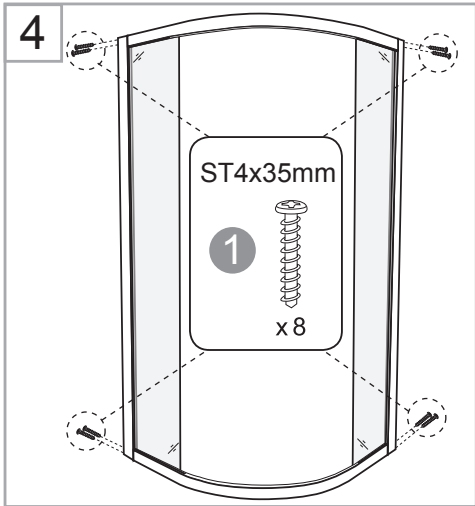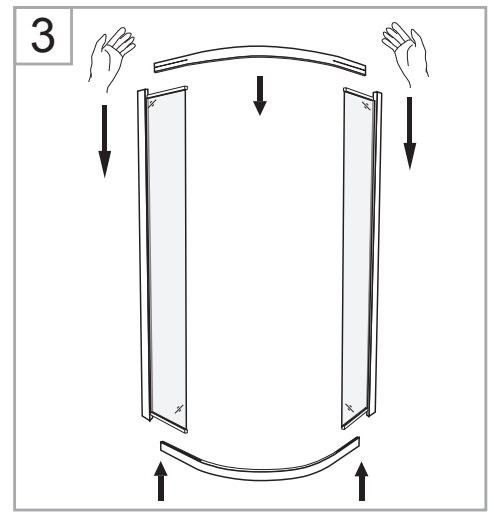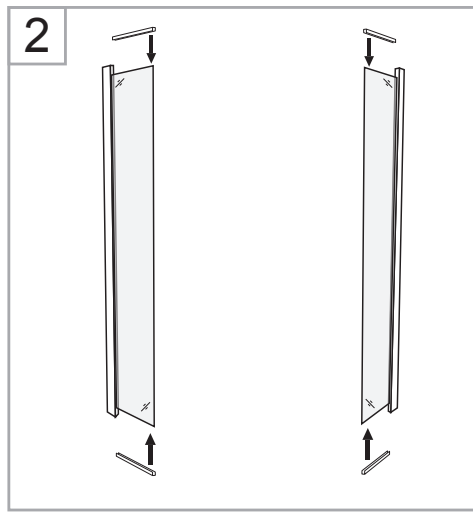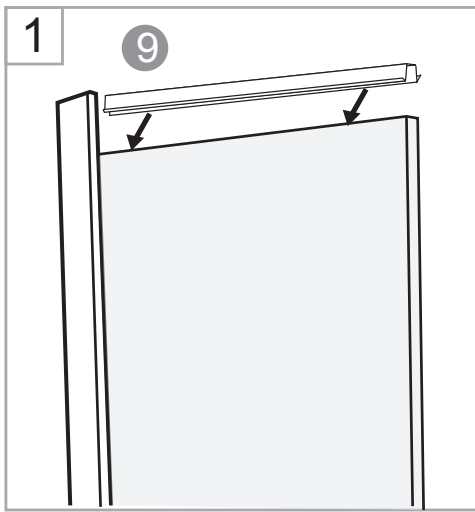

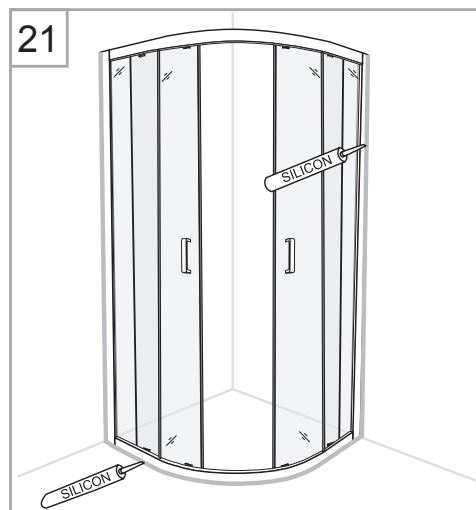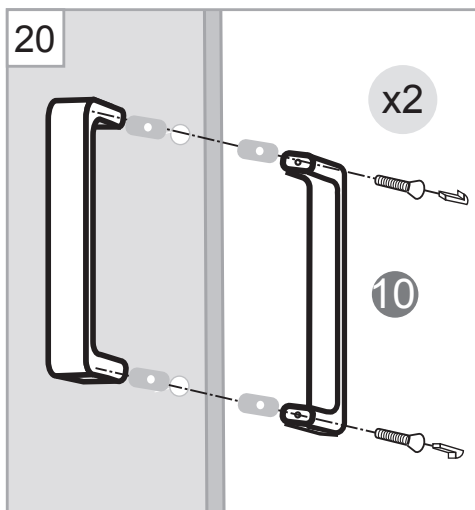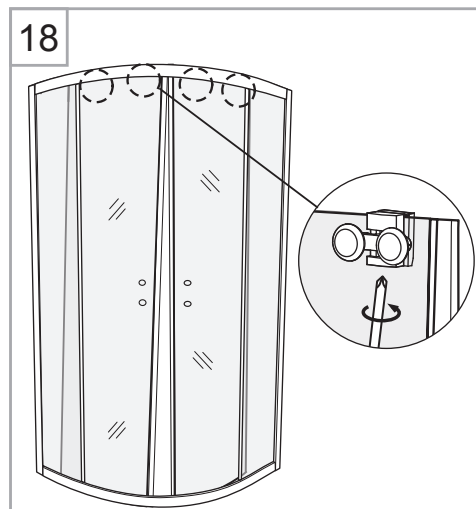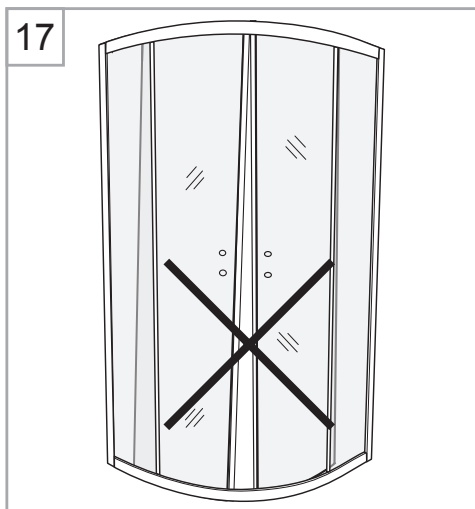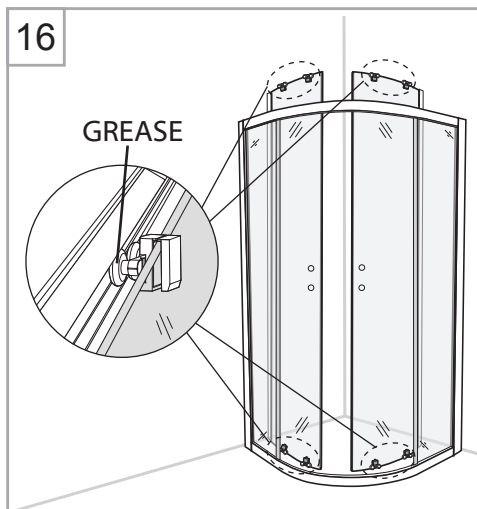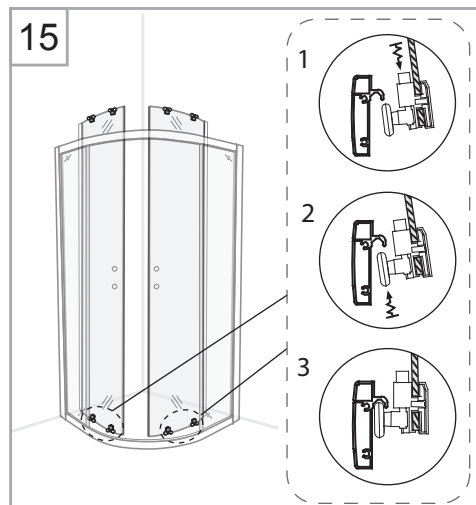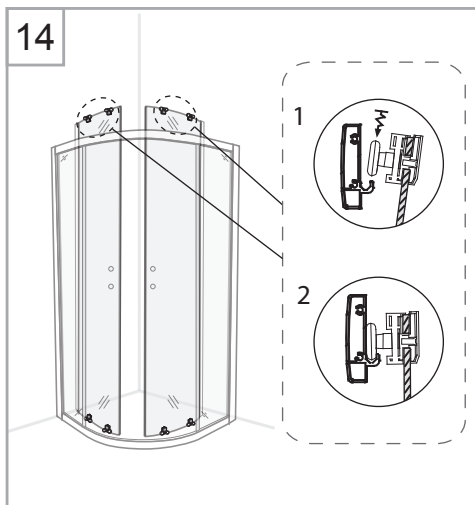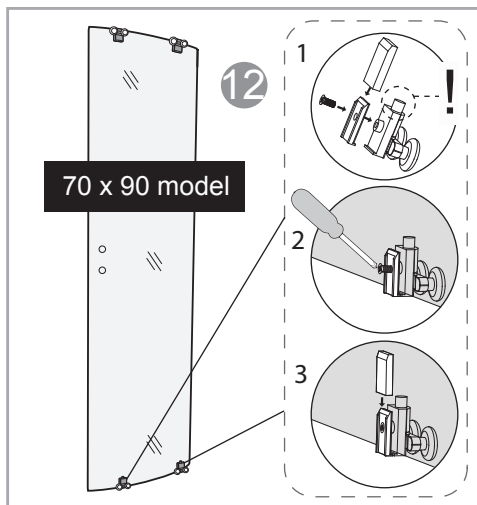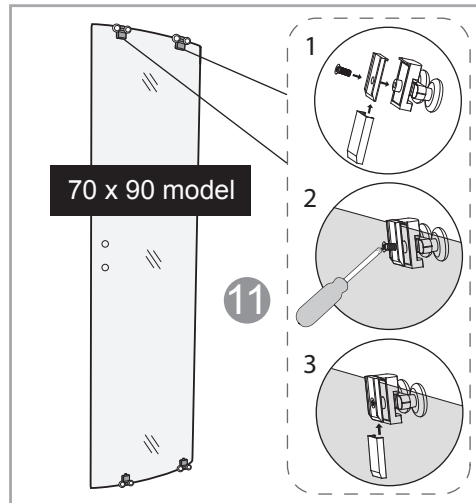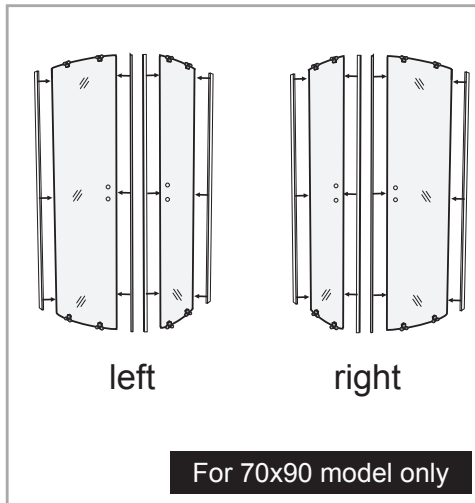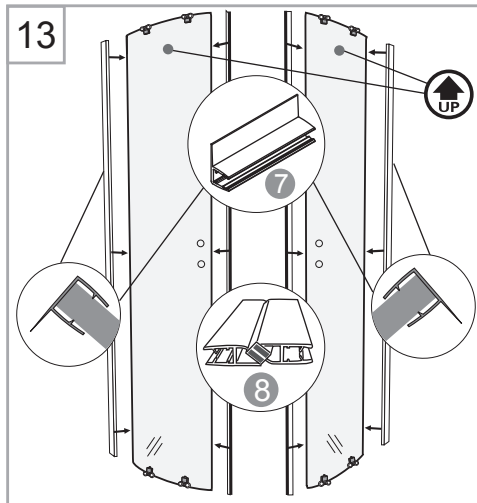



# SNOW R

035 166430 **SE**  
info@noro.se

020 7435740 **FI**  
info@norokylpyhuone.fi

692 36170 **NO**  
info@noro.se

070 252822 **DK**  
info@noro.se